


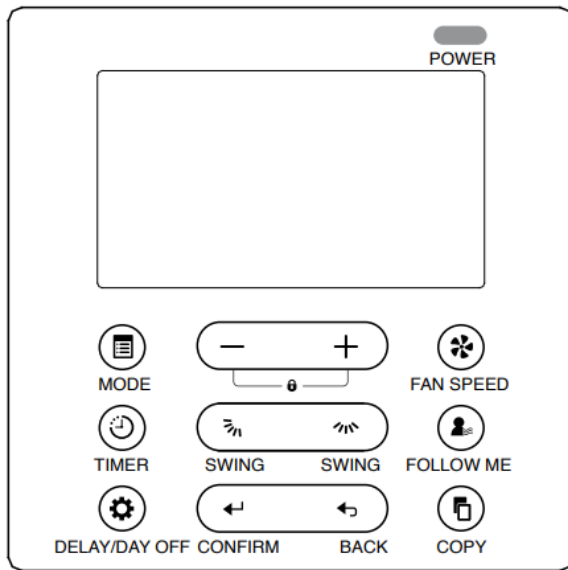

Controller may differ from illustration

Field Settings

1. Power up the air conditioner with the factory wall controller.
Do not connect the AC Gateway at this stage.
2. By default, the KADEN unit will utilise the on-board sensor located in the return air side to monitor your indoor temperature.
3. Remove the KADEN wall controller, as it is not required.
4. The ZoneMate Touch will control your KADEN system.
5. Remove the factory wall controller and wire in the AC Gateway.

DIP Switch Settings

Below are the DIP Switch Settings for your AC Gateway Box.

Check your settings and adjust if needed.

Wiring Diagram

