


LG | AC Gateway

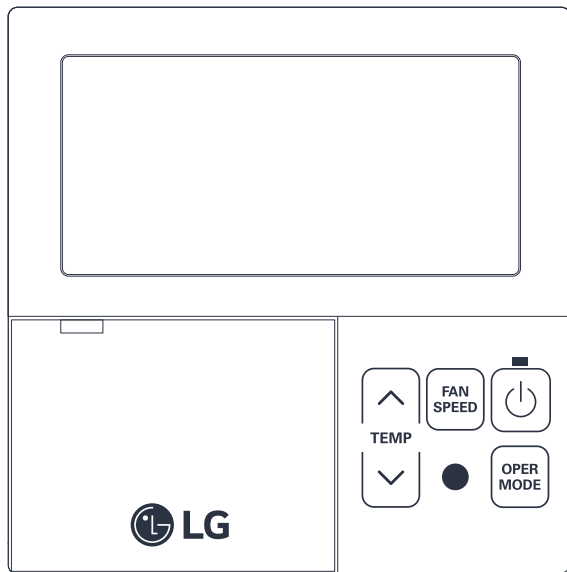

Controller may differ from illustration

Field Settings

1. Power up the air conditioner with the factory wall controller. **Do not connect the AC Gateway at this stage.**
2. Navigate to Installer settings on your wall control. Refer to your installation manual that came with your LG air conditioner to find out how to make changes to Installer settings.
3. In Installer settings, navigate to code value 04, for room temperature sensor.
4. Select the set value as 01. This value is for using the Remote Control temperature sensor.

NOTE: For wall control PREMTA, set value for sensor location is 001.

Item Code	04	Value	01
-----------	----	-------	----

5. Save the changes you have made and exit the Installer settings.
6. Remove the factory wall controller and wire in the AC Gateway.

Wiring Diagram

