


MITSUBISHI ELECTRIC | AC Gateway

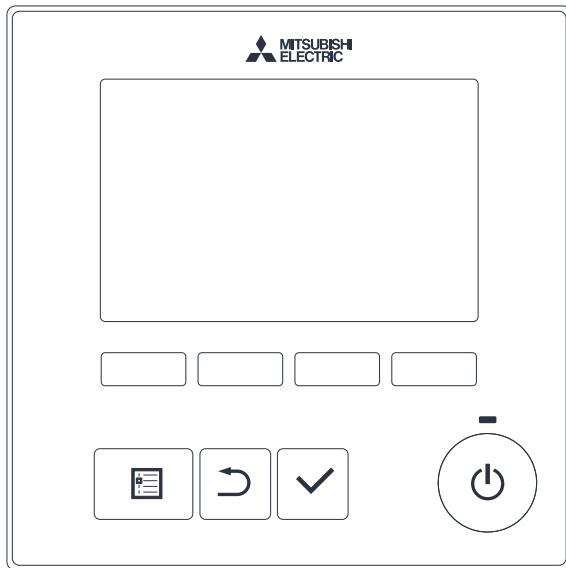

Controller may differ from illustration

Field Settings

1. Power up the air conditioner with the factory wall controller.
Do not connect the AC Gateway at this stage.
2. Navigate to Function settings on your wall control. Refer to your wall control installation manual that came with your Mitsubishi air conditioner to find out how to make changes to the Function settings.

NOTE: Function settings maybe password protected depending on your model. You may need to contact your installer or manufacturer to get the password if changed from the default or reset your controller.

In the Function settings, find Mode 02 and make sure it's set to Setting number 2 so the 'thermistor on the indoor unit' is used.

Mode	02	Setting Number	2
------	----	----------------	---

3. Save the changes you have made and exit the Function settings.
4. Remove the factory wall controller and wire in the AC Gateway.

Wiring Diagram

