


mitsubishi heavy | AC Gateway

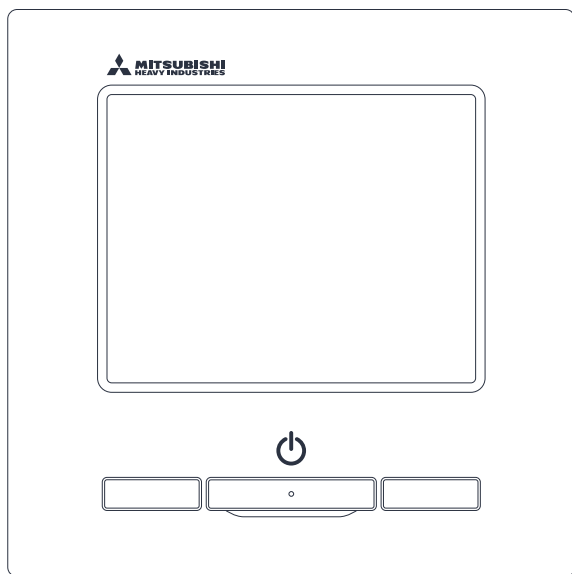

Controller may differ from illustration

Field Settings

1. Power up the air conditioner with the factory wall controller.
Do not connect the AC Gateway at this stage.
2. Navigate to Service settings menu on your wall control. Refer to your wall control installation manual that came with your Mitsubishi air conditioner to find out how to make changes to the Service settings.
3. In the main menu, go to the Service settings, navigate to R/C function settings.
NOTE: Service settings are password protected. You may need to contact your installer or manufacturer to get the password if changed from the default.
4. In R/C function settings, navigate to R/C sensor setting.
5. In R/C sensor setting, select the Enable option. This sets the wall control sensor to be used.
6. Save the changes and exit the Service settings.
7. Remove the factory wall controller and wire in the AC Gateway.

Wiring Diagram

