


PANASONIC | AC Gateway

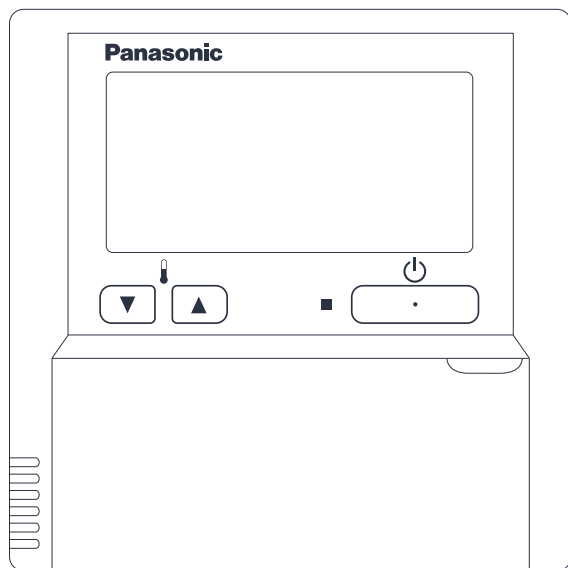

Controller may differ from illustration

Field Settings

1. Power up the air conditioner with the factory wall controller.
Do not connect the AC Gateway at this stage.
2. Navigate to detailed settings function. Refer to your wall control installation manual that came with your Panasonic air conditioner to find out how to make changes to the detailed settings functions.
3. In the Indoor unit setting menu, navigate to item code 32 and select its value as 0000.

Item code	32	Item name	Wired remote controller sensor	Value	0000
-----------	----	-----------	--------------------------------	-------	------

This sets the indoor unit sensor to be used.

4. Save the changes you have made and exit the setting menu.
5. Remove the factory wall controller and wire in the AC Gateway.

Wiring Diagram

