


TOSHIBA | AC Gateway

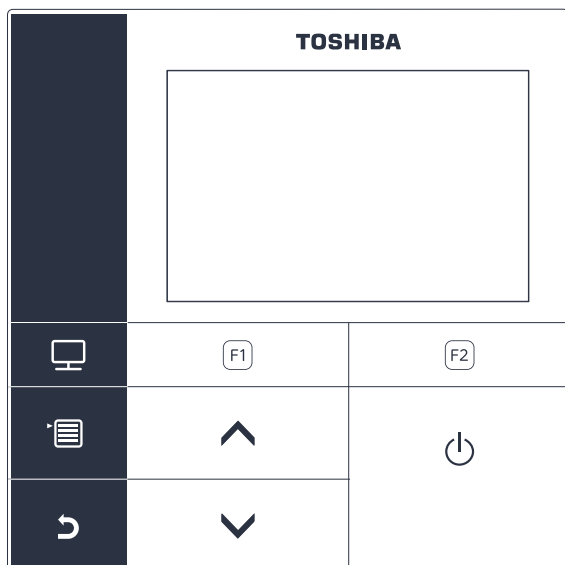

Controller may differ from illustration

Field Settings

1. Power up the air conditioner with the factory wall controller. Do not connect the AC Gateway at this stage.
2. Navigate to Field settings on your wall control. Refer to your wall control installation manual that came with your Toshiba air conditioner to find out how to make changes to the Field settings.

NOTE: It may not be called Field Settings or DN code depending on your Toshiba wall control model.

3. In the Field settings, navigate to DN settings.
4. In DN settings, navigate to DN code 32 and select its value as 0000. Choose the value for using indoor unit sensor.

DN Code	32	Value	0000
---------	----	-------	------

5. Save the changes you have made and exit the Field settings.
5. Remove the factory wall controller and wire in the AC Gateway.

Wiring Diagram

