


HISENSE | AC Gateway

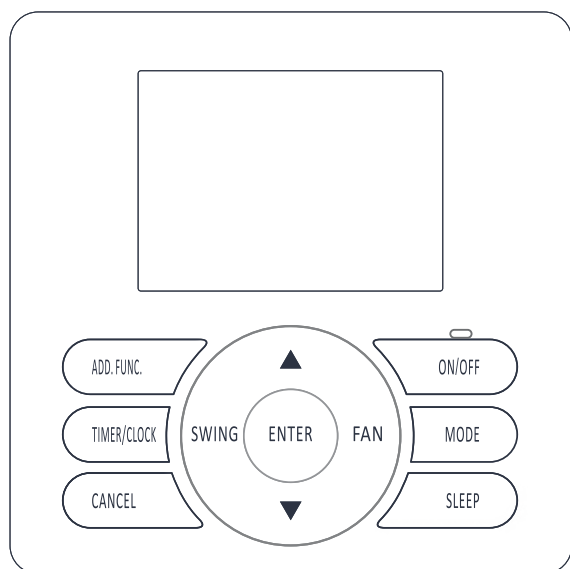

Controller may differ from illustration

Field Settings

1. Power up the air conditioner using the factory Hisense wall controller.
Do not connect the AC Gateway at this stage.
2. Go into the system settings menu on the Hisense wall controller.
Refer to the Hisense wall controller installation manual for instructions on accessing system settings.
3. In the sensor settings, locate the Wall Controller Sensor option.
4. Ensure the Wall Controller Sensor is enabled for both heating and cooling modes.
This is the default Hisense setting, so normally no changes are required.
5. Save any changes and exit the settings menu.
6. Remove the factory Hisense wall controller and wire in the AC Gateway as per the wiring diagram.

Wiring Diagram

