

DAIKIN | AC Gateway



Controller may differ from illustration

Field Settings

1. Power up the air conditioner with the factory wall controller.
Do not connect the AC Gateway at this stage.
2. Go to Field settings on your wall control. Refer to your wall control installation manual that came with your Daikin air conditioner to find out how to make changes to the Field settings.

In the Field settings, find Mode No. 20 shown as 10(20) in the manual, go to code 2 and change its value so **'Remote controller sensor only'** is selected. This will be either 01 or 03 depending your wall controller model.

Mode	20	First Code	2	Value	01 or 03
------	----	------------	---	-------	----------

3. Save the changes you have made and exit the Field settings.
4. Remove the factory wall controller and wire in the AC Gateway.

Wiring Diagram

