



FUJITSU | AC Gateway

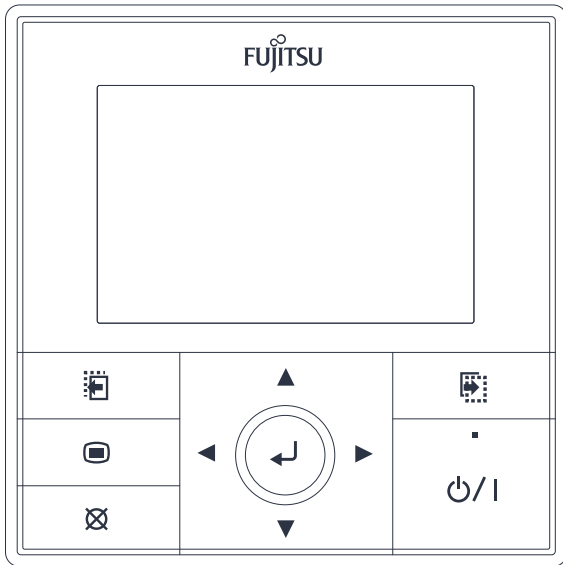

Controller may differ from illustration

Wiring Diagram

IMPORTANT: FOR SOME FUJITSU MODELS SET THE DIP SWITCH ON THE INDOOR UNIT PCB TO 3 WIRE OPTION BEFORE CONNECTING B W R WIRES

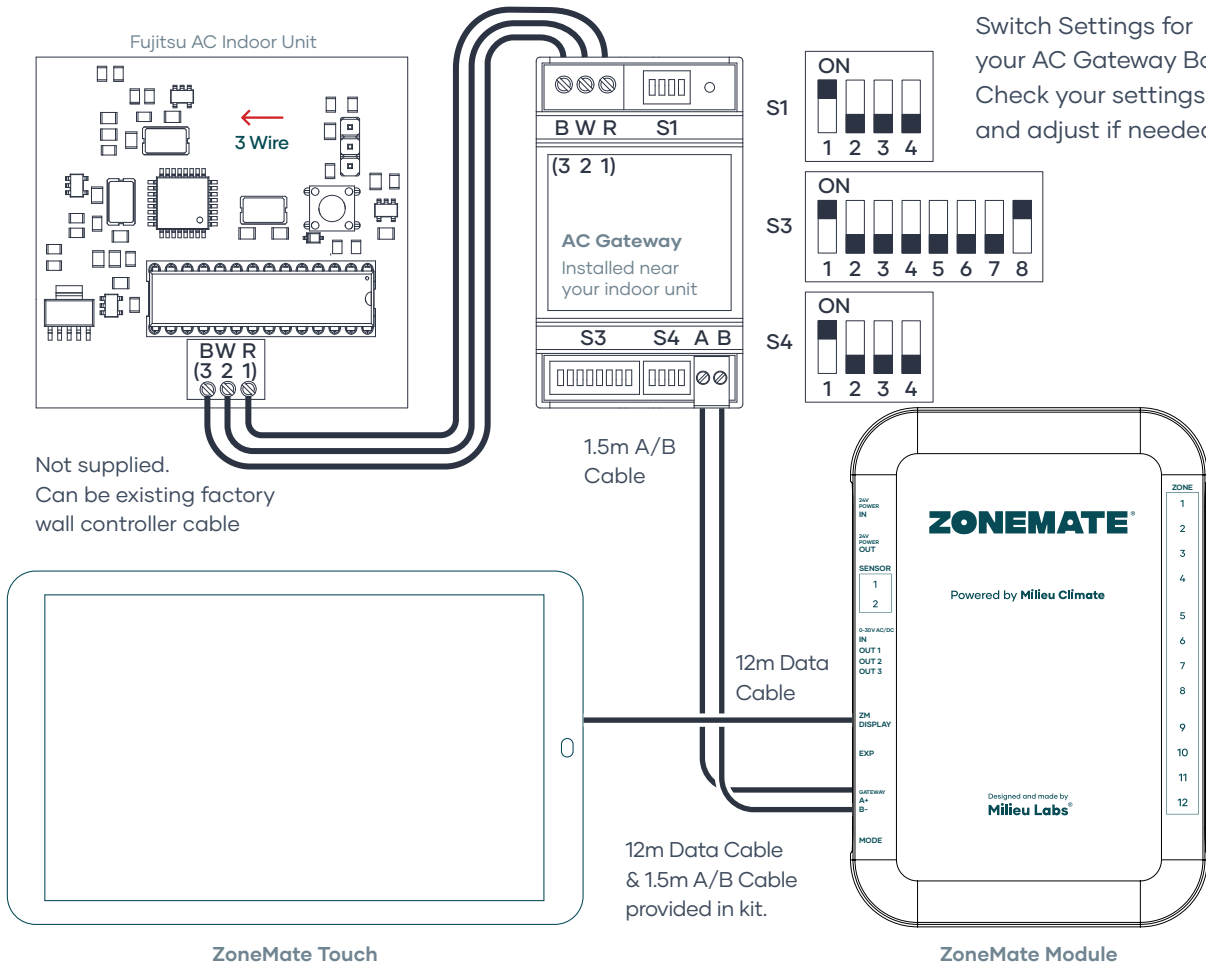

Field Settings

1. Power up the air conditioner with the factory wall controller.
Do not connect the AC Gateway at this stage.
2. Navigate to Service screen on your wall control. Refer to your wall control installation manual that came with your Fujitsu air conditioner to find out how to make changes in Service screen.
3. In Service screen, navigate to Function settings.
4. In Function settings, navigate to Function number 42 and set the value of setting number as 01 for using Remote Controller sensor.

Function Number	42	Setting Number	01
-----------------	----	----------------	----

5. Save the changes you have made and exit the Service screen.
6. Remove the factory wall controller and wire in the AC Gateway.