



HITACHI | AC Gateway

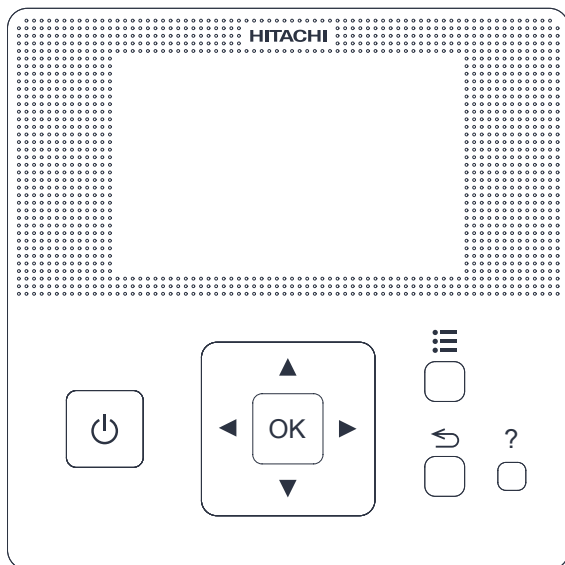

Controller may differ from illustration

Wiring Diagram

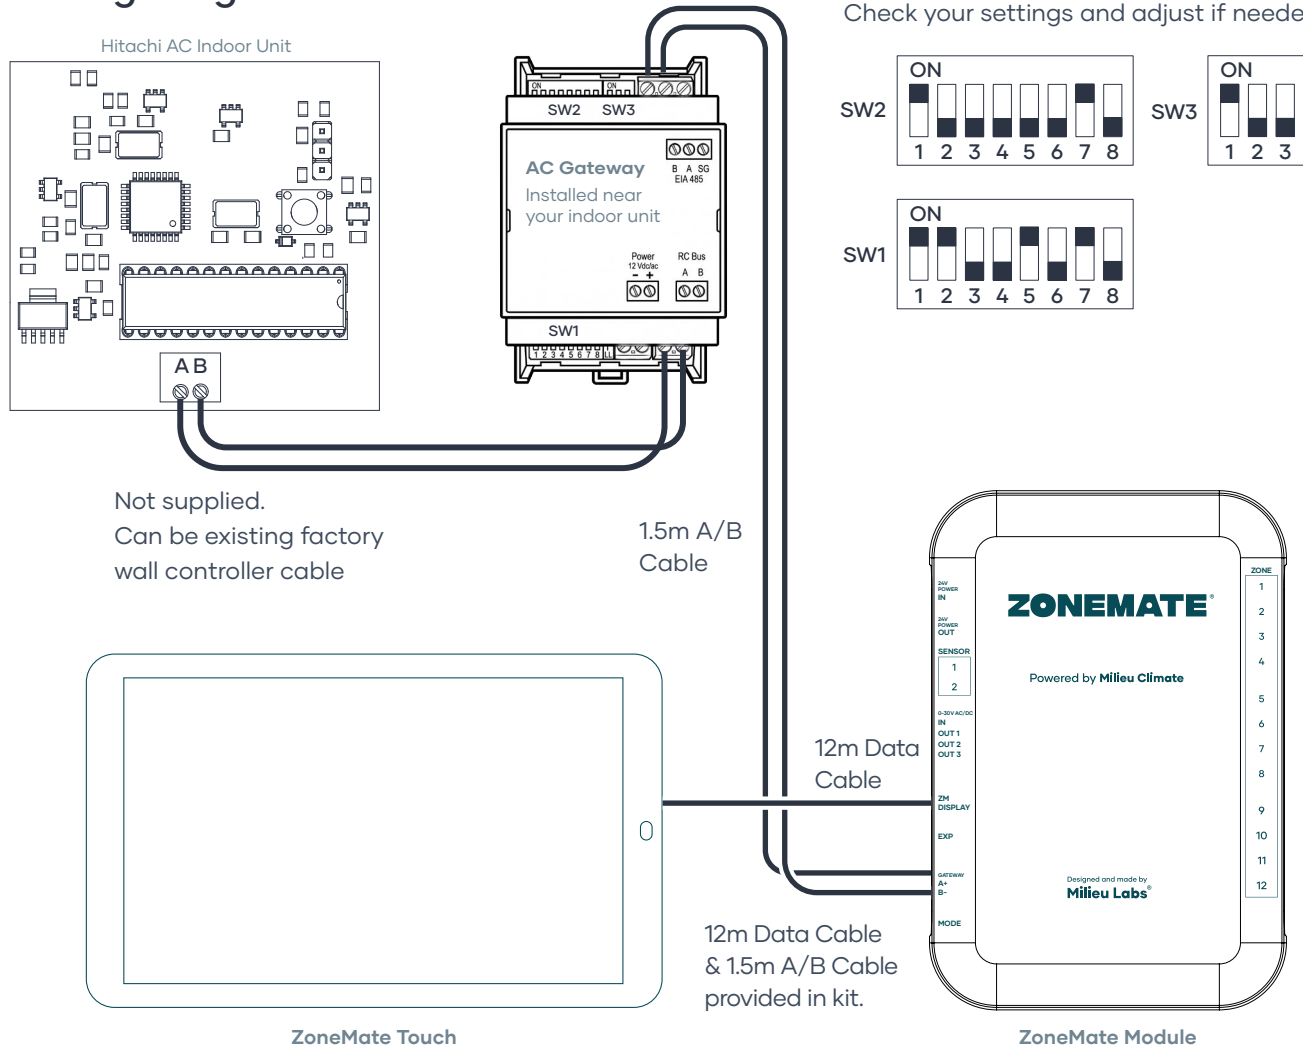

Field Settings

1. Power up the air conditioner with the factory wall controller.
Do not connect the AC Gateway at this stage.
2. Navigate to Test run menu on your wall control. Refer to your wall control installation manual that came with your Hitachi air conditioner to find out how to make changes in the Test Run menu.
3. In Test Run menu, navigate to Thermistor selection option.
4. In Thermistor selection menu, select the option so the thermistor of remote control is used.
5. Save the changes you have made and exit the Test Run menu.
6. Remove the factory wall controller and wire in the AC Gateway.

DIP Switch Settings

Below are the DIP Switch Settings for your AC Gateway Box.

Check your settings and adjust if needed.

