


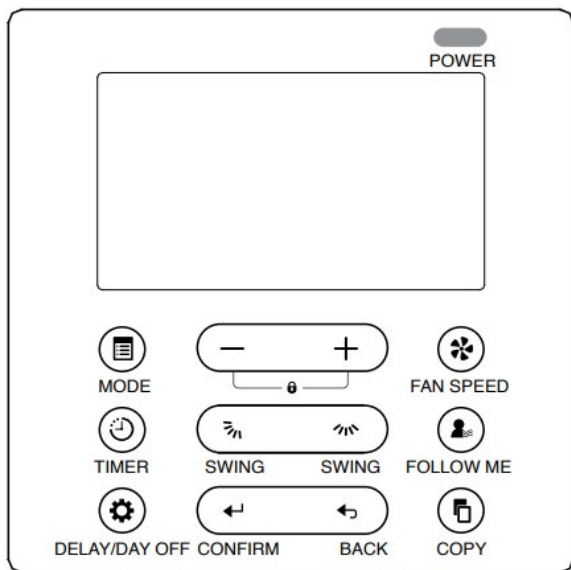

Controller may differ from illustration

Field Settings

1. Power up the air conditioner using the factory KADEN wall controller. **Do not connect the AC Gateway at this stage.**
2. Test the air conditioner using the KADEN wall controller to confirm the system is operating correctly.
3. By default, the KADEN indoor unit uses the built-in return air temperature sensor located in the return air section of the indoor unit.
4. Once testing is complete, remove the KADEN wall controller. It is no longer required.
5. The ZoneMate Touch will now operate as the primary controller for your KADEN air conditioning system.

DIP Switch Settings

Below are the DIP Switch Settings for your AC Gateway Box.

Check your settings and adjust if needed.

Wiring Diagram

