


SAMSUNG (NASA) | AC Gateway

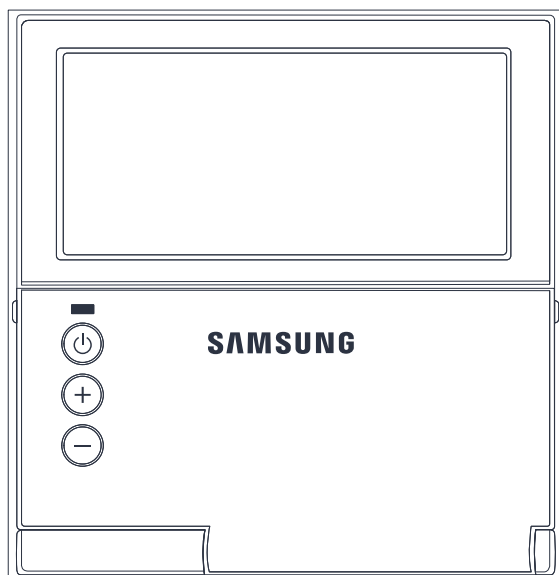

Controller may differ from illustration


Field Settings

1. Power up the air conditioner with the factory wall controller.
Do not connect the AC Gateway at this stage.
2. Navigate to main menu 1 on your wall control. Refer to your wall control installation manual that came with your Samsung air conditioner to find out how to make changes to additional function settings.
3. In main menu 1, navigate to sub menu 2.
4. In sub menu 2, navigate to temperature sensor selection setting.
5. Select the value of 1 for temperature sensor selection setting.
This value is for using the **temperature sensor on wired remote controller.**

Sub menu 2	Temperature sensor selection	Setting	1
------------	------------------------------	---------	---

6. Save the changes you have made and exit the main menu.
7. Remove the factory wall controller and wire in the AC Gateway.

Wiring Diagram

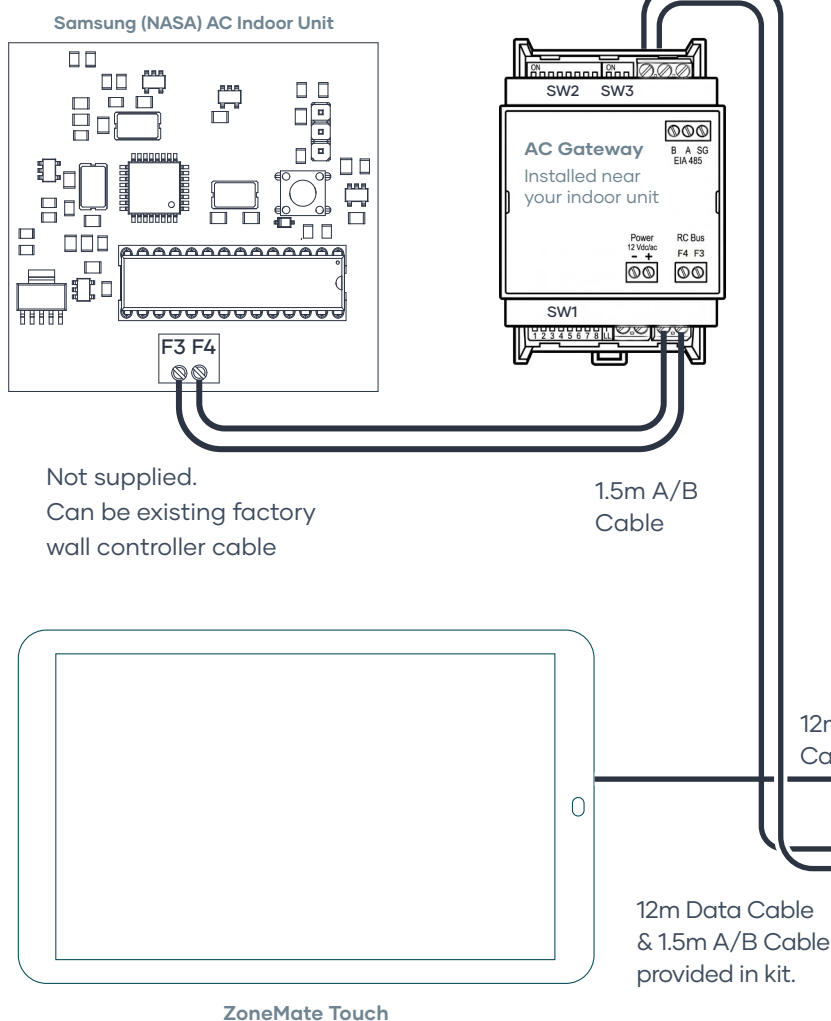

DIP Switch Settings

Below are the DIP Switch Settings for your AC Gateway Box.

Check your settings and adjust if needed.

